



HIMOINSA®
THE ENERGY

Model: **HYW-35 T5**

INDUSTRIAL RANGE

Soundproof

Powered by YANMAR



- B10
- WATER-COOLED
- THREE PHASE
- 50 HZ
- STAGE 3A
- DIESEL

Generating Rates

| SERVICE | | PRP | STANDBY |
|-----------------------|---------|--------------------------------|---------|
| Power | kVA | 34 | 37 |
| Power | kW | 27 | 30 |
| Rated Speed | r.p.m. | 1.500 | |
| Standard Voltage | V | 400 | |
| Available Voltages | V | 400/230 - 230/132 - 230V (m) V | |
| Rated at power factor | Cos Phi | 0,8 | |



HIMOINSA Company with quality certification ISO 9001

HIMOINSA gensets are compliant with EC mark which includes the following directives:

- EN ISO 13857:2008 Machinery safety.
- 2006/95/EC Low voltage.
- 89/336/EEC Electromagnetic compatibility.
- 2000/14/EC Sound Power level. Noise emissions outdoor equipment. (amended by 2005/88/EC)
- 97/68/EC Emissions of gaseous and particulate pollutants. (amended by 2002/88/EC & 2004/26/EC)

Ambient conditions of reference: 1000 mbar, 25°C, 30% relative humidity. Power according to ISO 3046 normative.

PR.P. Prime Power - ISO 8528 : prime power is the maximum power available during a variable power sequence, which may be run for an unlimited number of hours per year, between stated maintenance intervals. The permissible average power output during a 24 hours period shall not exceed 80% of the prime power. 10% overload available for governing purposes only.

Standby Power (ISO 3046 Fuel Stop power): power available for use at variable loads for limited annual time (500h), within the following limits of maximum operating time: 100% load 25h per year – 90% load 200h per year. No overload available. Applicable in case of failure of the main in areas of reliable electrical network.

HIMOINSA HEADQUARTERS:

Fábrica: Ctra. Murcia - San Javier, Km. 23,6 | 30730 SAN JAVIER (Murcia) Spain
Tel.+34 968 19 11 28 Fax +34 968 19 12 17 Fax +34 968 19 04 20 info@himoinsa.com www.himoinsa.com

Manufacture facilities:

SPAIN • FRANCE • INDIA • CHINA • USA

Subsidiaries:

ITALY | PORTUGAL | POLAND | GERMANY | SINGAPORE | UAE | MEXICO | PANAMÁ | ARGENTINA



Ctra. Murcia - San Javier, km. 23.6 | 30730 San Javier (Murcia) SPAIN | Tel.: +34 902 19 11 28 / +34 968 19 11 28
Fax: +34 19 12 17 | Export Fax +34 968 19 04 20 E-mail:info@himoinsa.com | www.himoinsa.com





Model: **HYW-35 T5**

INDUSTRIAL RANGE

Soundproof

Powered by YANMAR

Engine Specifications 1.500 r.p.m.

| ENGINE | | PRP | STANDBY |
|--------------------------------|-------|-------------------------------------|---------|
| Rated Output | Kw | 30,7 | 34,1 |
| Manufacturer | | YANMAR | |
| Model | | 4TNV98 ZGGEH | |
| Engine Type | | Diesel 4 strockes-cycle | |
| Injection Type | | Direct | |
| Aspiration Type | | Natural | |
| Ciylanders Arrangement | | 4 - L | |
| Bore and Stroke | mm | 98 x 110 | |
| Displacement | L | 3,319 | |
| Cooling System | | coolant | |
| Engine Specifications | | SAE 3 class 10W30 / IPE grade CD,CF | |
| Compression Ratio | | 18,5 | |
| Fuel Comsumption Stand By | l/h | 9,34 | |
| Fuel Comsumption 100% PRP | l/h | 8,92 | |
| Fuel Comsumption 75 % PRP | l/h | 6,56 | |
| Fuel Comsumption 50 % PRP | l/h | 4,6 | |
| Lube Oil consumption full load | g/kwh | 0,27 | |
| Total Oil Capacity | L | 10,5 | |
| Total Coolant Capacity | L | 9 | |
| Governor | Type | Mechanical | |
| Air Filter | Type | Dry | |
| Inner diameter exhaust pipe | mm | 40 | |




Model: **HYW-35 T5**
INDUSTRIAL RANGE
Soundproof
Powered by YANMAR

Generator

| Generator | | |
|--------------------------------|-------|-------------------------------|
| Poles | Num | 4 |
| Winding Conections (standard) | | Star-serie |
| Frame Mounting | | S-3 11"1/2 |
| Insulation | Class | H class |
| Enclosure (according IEC-34-5) | | IP23 |
| Exciter System | | self-excited, brushless |
| Voltage Regulator | | A.V.R. (Electronic) |
| Steady Voltage Precision | | ± 1% |
| Bearing | | Single bearing |
| Coupling | | Flexible disc |
| Coating type | | Standar (Vacuum impregnation) |



Control Panel Models

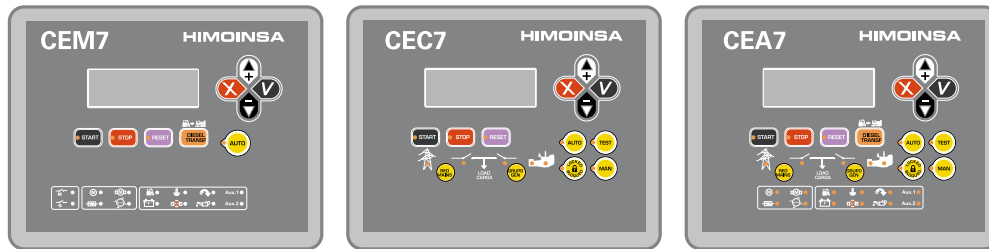

CEM7

CEC7

CEA7

| FUNCTIONALITY | PANEL MODEL | CONTROLLER MODE |
|--|-------------|-----------------|
| Auto-start | M5 | CEM7 |
| Automatic Control Panel Without Mains Control | AS5 | CEM7** |
| Automatic Control Panel With Mains Control (customer change over contactors) | AS5 | CEA7 |
| Automatic Control Panel With Mains Control (Himoinsa change over contactor with display) | AS5XCC2 | CEM7+CEC7 |
| Automatic Mains Failure (wall mounted panel) | AC5 | CEA7 |

(**) Pre-heating resistance in the Genset and Battery charger in the control panel included.

Option available: Auto-start control panel without circuit breaker

General Description

CEM 7

The CEM7 controller unit is a device able to control de operation, monitoring and protection of a generating set. The controller unit consists of 2 different modules:

1. The VISUALIZATION module
2. The MEASUREMENTS module

VISUALIZATION MODULE
Provides information about the status of the device and, at the same time, allows the user to interact with it. It consists on a backlit display and various LEDs for monitoring the status of the controller and buttons that allow the user to control, program and configure the functions of the unit.

MEASUREMENTS MODULE
Controls and monitors the control board. It is located in the rear part of the panel, in order to reduce the wiring and to avoid electromagnetic disturbances. Every signal, sensor and actuator is connected to this module.

The connexion between the visualization module and the measurements module is made with a CAN communication bus. This feature allows the intercommunication of other modules to the main controller with a scalability warranty.

CEC 7

The CEC7 controller unit is a net sings supervision equipment, and control and supply supplier through generating set. The controller unit consists of 2 different modules:

1. The VISUALIZATION module
2. The MEASUREMENTS module

VISUALIZATION MODULE
The visualization module provides information about the status of the device and, at the same time, allows the user to interact with it. With this visualization module the user is able to control, program and configure the functions of the unit. It consists on a backlit display and various LEDs for monitoring the status of the controller and buttons that allow the user to control, program and configure the functions of the unit.

MEASUREMENTS MODULE
The measurements module controls and monitors the control board. It is located in the rear part of the panel, in order to reduce the wiring and to avoid electromagnetic disturbances. Every signal, sensor and actuator is connected to this module

The connection between the measure module and visualization mode is made by means of a CAN BUS (Communication Bus). This produces an interconnection between additional modules which guarantees the proper working of the controller.

CEA 7

CEA7 controller is a supervision equipment for mains signal and also a supervision and electrical supply through the genset. This controller is composed by 2 different modules:

1. VISUALIZATION module
2. MEASUREMENTS module

VISUALIZATION MODULE
The visualization module provides information about the status of the device and, at the same time, allows the user to interact with it. With this visualization module the user is able to control, program and configure the functions of the unit.

MEASUREMENTS MODULE
The measurements module controls and monitors the control board. It is located in the rear part of the panel, in order to reduce the wiring and to avoid electromagnetic disturbances. Every signal, sensor and actuator is connected to this module. Connection between the measure module and visualization mode is made by means of a CAN BUS (Communication Bus). This produces an interconnection between additional modules which guarantees the proper working of the controller.



HIMOINSA®
THE ENERGY

Model: **HYW-35 T5**
INDUSTRIAL RANGE
Soundproof
Powered by YANMAR

Control & Power Panel

1. CM Control Panel.
2. CP Power Panel.
3. On/Off Switch..
4. Emergency Stop.
5. Main Line Circuit Breaker for differential protection.
6. Main bus /hardwire connection panel with safety protection.

CE-7 Auto-start multilingual control panel

1. Voltage between each Phase & Neutral
2. Voltage between Phases
3. Current (amps) on each Phase
4. Frequency
5. Active, Aparent & Reactive Power
6. Power Factor
7. Instant Power (KwH) and Accumulative power)
8. Fuel level
9. Oil pressure, coolant temperature, oil temperature
10. Battery voltage, battery charging alternator voltage
11. Engine Speed
12. Hours running
13. Multilingual (Spanish, English, French, Italian, Portuguese, Polish, German, Chinese, Russian, Swedish, Norwegian)

Engine Alarms

1. High coolant temperature.
2. Low oil pressure.
3. Battery charge alternator
4. Start failure.
5. Low water level.
6. Fuel storage.
7. Overspeed.
8. Underspeed.
9. Low battery voltage.
10. High coolant temperature by sensor.
11. Low oil pressure by sensor.
12. Low fuel level by sensor.
13. Unexpected shutdown.
14. Stop failure.
15. Low engine temperature.
16. Genset voltage drops.
17. Emergency stop.

Programmable Alarms:

There are 5 programmable alarms on text and action that could be associated to any engine alarms and showed on the auxiliary led 1 and 2 of the display

Generator Alarms

1. Over-load
2. Unbalanced voltage
3. Over voltage
4. Under voltage
5. Over frequency
6. Under frequency
7. Over load
8. Short-circuit
9. Inverse Power
10. Incorrect phase sequence
11. Asymmetry among phases
12. Emergency stop

Mains Alarms

1. Maximum Mains Voltage.
2. Minimum Mains Voltage.
3. Maximum Mains Frequency.
4. Minimum Mains Frequency.
5. Mains phase sequence failure.
6. Mains power failure.
7. Mains contactor switching failure.





Controllers Features

| | CEM 7 | CEC 7 | CEA 7 | CEM7 + CEC7 |
|------------------------------------|-------|-------|-------|-------------|
| GENERATOR READINGS | | | | |
| Voltage among phases | • | • | • | • |
| Voltage among phases and neutral | • | • | • | • |
| Amperage | • | • | • | • |
| Frequency | • | • | • | • |
| Apparent power (kVA) | • | • | • | • |
| Active power (kW) | • | • | • | • |
| Reactive power (kVAr) | • | • | • | • |
| Power factor | • | • | • | • |
| MAINS READINGS | | | | |
| Voltage among phases | x | • | • | • |
| Voltage among phase and neutral | x | • | • | • |
| Amperage | x | • | • | • |
| Frequency | x | • | • | • |
| Apparent power | x | x | • | • |
| Active power | x | x | • | • |
| Reactive power | x | x | • | • |
| Power factor | x | x | • | • |
| ENGINE READINGS | | | | |
| Coolant temperature | • | x | • | • |
| Oil pressure | • | x | • | • |
| Fuel level (%) | • | x | • | • |
| Battery voltage | • | x | • | • |
| R.P.M. | • | x | • | • |
| Battery charge alternator voltage | • | x | • | • |
| ENGINE PROTECTIONS | | | | |
| High water temperature | • | x | • | • |
| High coolant temperature by sensor | • | x | • | • |
| Low engine temperature by sensor | • | x | • | • |
| Low oil pressure | • | x | • | • |
| Low oil pressure by sensor | • | x | • | • |
| Low coolant level | • | x | • | • |
| Unexpected shutdown | • | x | • | • |
| Fuel storage | • | x | • | • |
| Fuel storage by sensor | • | x | • | • |
| Stop failure | • | x | • | • |
| Battery voltage failure | • | x | • | • |
| Battery charge alternator failure | • | x | • | • |
| Overspeed | • | x | • | • |
| Underspeed | • | x | • | • |
| Start failure | • | x | • | • |
| Emergency Stop | • | • | • | • |
| ALTERNATOR PROTECTIONS | | | | |
| High frequency | • | • | • | • |
| Low frequency | • | • | • | • |
| High voltage | • | • | • | • |
| Low voltage | • | • | • | • |
| Short-circuit | • | x | • | • |
| Asymmetry among phases | • | • | • | • |
| Incorrect phase sequence | • | • | • | • |
| Inverse power | • | x | • | • |
| Overload | • | x | • | • |
| Genset signal droop | • | • | • | • |

- Standard
- x Not included
- Optional

NOTE: All protections are programmable to make "warning" or "stop with cooling time" or "without"



Controllers Features

| | CEM 7 | CEC 7 | CEA 7 | CEM7 + CEC7 |
|------------------------------------|----------------|-------|----------------|----------------|
| COUNTERS | | | | |
| Total hour counter | • | • | • | • |
| Partial hour counter | • | • | • | • |
| Kilowattmeter | • | • | • | • |
| Starts valid counters | • | • | • | • |
| Starts failure counters | • | • | • | • |
| Maintenance | • | • | • | • |
| COMMUNICATIONS | | | | |
| RS232 | • | • | • | • |
| RS485 | • | • | • | • |
| Modbus IP | • | • | • | • |
| Modbus | • | • | • | • |
| CCLAN | • | X | • | • |
| Software for PC | • | • | • | • |
| Analogic modem | • | • | • | • |
| GSM/GPRS modem | • | • | • | • |
| Remote screen | • | X | • | • |
| Telesignal | •(8+4) | | •(8+4) | •(8+4) |
| J1939 | • | X | • | • |
| FEATURES | | | | |
| Alarms history | (10) / (•+100) | -10 | (10) / (•+100) | (10) / (•+100) |
| External start | • | • | • | • |
| Start inhibition | • | • | • | • |
| Mains failure start | •(CEC7) | • | • | • |
| Start under normative EJP | • | X | • | • |
| Genset contactor activation | • | X | X | • |
| Main & Genset contactor activation | X | • | • | • |
| Fuel transfer control | • | X | • | • |
| Engine temperature control | • | X | • | • |
| Manual override | • | X | • | • |
| Programmable alarms | • | X | • | • |
| Genset start function in test mode | • | X | • | • |
| Programmable outputs | • | X | • | • |
| Multilingual | • | • | • | • |
| SPECIAL FUNCTIONS | | | | |
| Positioning GPS | • | | • | • |
| Synchronization with mains | • | | • | • |
| Mains Synchronism | • | | • | • |
| Second Cero suppression | • | | • | • |
| RAM 7 | • | | • | • |
| Remote screen | • | | • | • |
| Timer | • | | • | • |

- Standard
 - x Not included
 - Optional
- CEC7: available when the controller CEC7 is incorporated to the installation
MPS 5.0: available application when the module MPS 5. has been incorporated to the panel.
Note: AS5 + CC2 configuration, will have all CEM7 functionality plus CEC7 mains readings.



Generating Sets Standard and Optional Features

Engine

- Diesel engine
- 4 strokes-cycle
- Water-cooled
- 12V Electrical system
- Radiator with blowing fan
- water separator decanting filter (visible level)
- Mechanical governor
- Dry air cleaner
- Hot components and radiator guards
- Mobile components guards

Alternator

- Self-excited and Self-regulated
- IP23 protection degree
- Insulation H class

Electrical system

- Control and power electric panel, with measurements devices and controller (according to necessity and configuration)
- 4 poles circuit breaker
- Earth leakage protection adjustable (time & sensibility) standard in M5 and AS5 configuration with MCCB
- Battery charger (standard on automatic control panels)
- Pre-heating resistance (standard on automatic control panels) / water jacket heater
- Battery charge alternator with ground connection
- Starting battery/ies installed and connected to the engine (supports included)
- Ground connection electrical installation with connection ready for ground pike (not supplied)
- Optional : · Battery disconnecter

Soundproofed version

- Oil sump extraction kit
- Versatility to assemble high capacity metallic fuel tank chassis
- Steel made chassis
- Antivibration shock absorber
- Chassis with integrated fuel tank
- Fuel level sensor
- Emergency stop button
- Sound attenuated canopy made of high quality steel metal.
- High mechanical strenght
- Low noise level
- Attenuation through high density roock wool material
- Powder coating
- Easy acces for service mainteance
- Reinforced lifting eye to lift by crane
- Bunded chassis (works as liquids retention tray)
- Drain fuel tank cap
- Drain chassis cap
- Chasis ready for future mobile kit installation
- Steel made residential silencer -35db(A) attenuation.
- Optional : · Fuel transfer pump



Model: **HYW-35 T5**

INDUSTRIAL RANGE

Soundproof

Powered by YANMAR

Application Data

| Exhaust System | | |
|---|--------|------|
| Maximum exhaust temperature 100% Stand By | °C | 550 |
| Exhaust Gas Flow 100% Stand By | m3/min | 8,52 |
| Maximum allowed back pressure | mm H2o | 1300 |
| Exhaust Flange Size (external diameter) | mm | 56 |

| Air Inlet System | | |
|--------------------------------|------|--------|
| Intake Air Flow 100% Stand By | m3/h | 134,42 |
| Cooling Air Flow 100% Stand By | m3/s | 0,979 |
| Alternator fan air flow | m3/s | 0,09 |

| Starting System | | |
|------------------------------|-----|------|
| Starting Motor | Kw | 2,3 |
| Starting Motor | CV | 3,13 |
| Recommended Battery Capacity | Ah | 92 |
| Auxiliary Voltage | Vcc | 12 |

| Fuel System | | |
|--------------------------|---|--------|
| Fuel Oil Specifications | | Diesel |
| Fuel Tank | L | 100 |
| Other Fuel tank capacity | L | 330 |



Model: **HYW-35 T5**

INDUSTRIAL RANGE

Soundproof

Powered by YANMAR

Dimensions



| B10 Weight and Dimensions | | |
|---|----------------|-------|
| (L) Length | mm | 2.100 |
| (H) Height | mm | 1.349 |
| (W) Width | mm | 975 |
| Shipping Volume seaworthy (standard supplier) | m ³ | 2,76 |
| (*) Dry weight | Kg | 950 |
| Fuel tank capacity | L. | 100 |
| Autonomy | Hours | 15 |
| Sound Level | db(A)@7m | 63 |

(*) (with standard accessories)

STANDARD VERSION

Himoinsa reserve the right of modify any characteristic without prior notice.

Weights and dimensions based on products standar and dry / illustrations may include optional equipment.

Technical data here described correspond with the available information at the moment of printing.

Industrial design under patent.

Local Distributor



HIMOINSA[®]
THE ENERGY

Model: **HYW-35 T5**

INDUSTRIAL RANGE

Soundproof

Powered by YANMAR

Another measures/dimensions of available versions

| Weight and Dimensions | | |
|---|----------|-------|
| (L) Length | mm | 2.100 |
| (H) Height | mm | 1.562 |
| (W) Width | mm | 975 |
| Shipping Volume seaworthy (standard supplier) | m3 | 3,2 |
| (*) Dry weight | Kg | 1.060 |
| Fuel tank capacity | L. | 330 |
| Autonomy | Hours | 50 |
| Sound Level | db(A)@7m | 63 |

(*) (with standard accessories)

HIGH CAPACITY VERSION





HIMOINSA[®]
THE ENERGY

CONTROL PANEL MODEL

Model: **HYW-35 T5**

INDUSTRIAL RANGE

Soundproof

Powered by YANMAR


M5

Digital manual auto-start control panel and thermal magnetic protection (according to voltage and phase) and differential relay. CEM7



AS5

Automatic control panel WITHOUT ATS (Automatic Transfer Switch) and WITHOUT mains control. CEM7

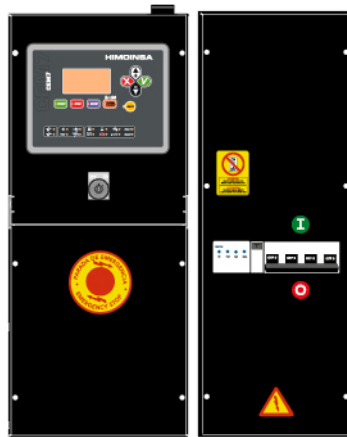

CC2

Himoinsa External ATS WITH visualization display. CEC7





HIMOINSA[®]
THE ENERGY

CONTROL PANEL MODEL

AS5 + CC2


Automatic with mains control and ATS with visualization. The visualization will be in the genset and in the ATS box. CEM7+CEC7

Model: **HYW-35 T5**

INDUSTRIAL RANGE


Soundproof

Powered by YANMAR

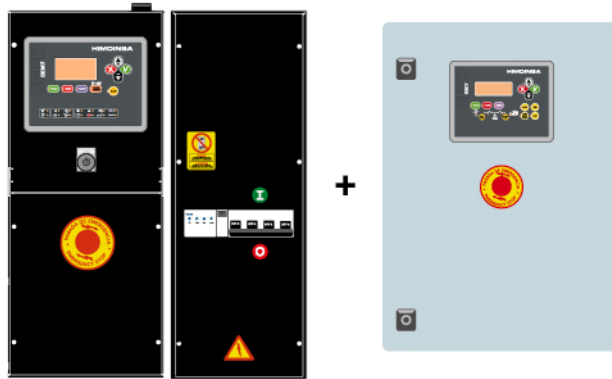

AC5

Automatic Mains Failure control panel. Wall mounted Automatic control panel including transfer switch with thermal magnetic protection (according to voltage and phase). CEA7

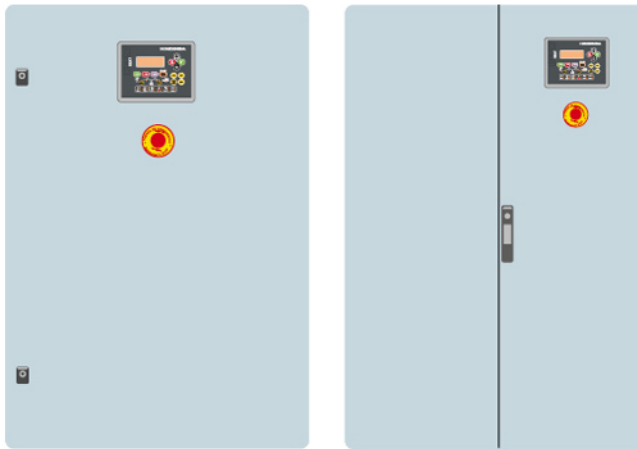



HIMOINSA®
THE ENERGY

Model: **HYW-35 T5**
INDUSTRIAL RANGE
Soundproof
Powered by YANMAR

PDF Summary

Created : 14/02/2011 23:07

Author : Himoinsa

Number of pages : 14

Report Type: Data Sheet - Industrial range

Generated by: HIMOINSA Engineering Dept.

Page 1. Genset data

Page 2. Engine Specifications

Page 3. Generator Specifications

Page 4. Control Panels models + General Description

Page 5. Control box and power, CE7 Panel, Alarms

Page 6. Controller features (I)

Page 7. Controller features (II)

Page 8. Generator Features & Options

Page 9. Installation Data

Page 10. Dimensions

Page 11. Another measures/dimensions of available versions

Page 12. Control Panel Model

Page 13. Control Panel Model

Page 14. PDF Summary (ID454E323137363138)



Ctra. Murcia - San Javier, km. 23,6 | 30730 San Javier (Murcia) SPAIN | Tel.: +34 902 19 11 28 / +34 968 19 11 28
Fax: +34 19 12 17 | Export Fax +34 968 19 04 20 E-mail: info@himoinsa.com | www.himoinsa.com

